


Bruksanvisning verk FS60/61




FEATURES

This watch is an analog quartz watch equipped with features including a Day retrograde display and chronograph function.

DISPLAYS AND BUTTONS

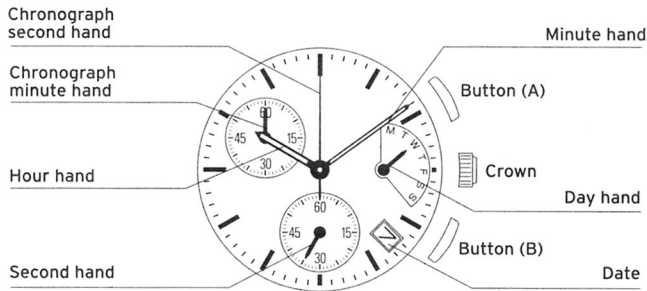


SETTING THE TIME

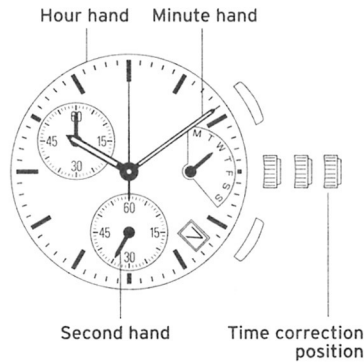

1. Pull the crown out to the time correction position when the second hand has reached the 0 seconds position.
2. Turn the crown to set the time in synchronization with a telephone or other time service.
3. Securely return the crown to the normal position.

SETTING THE DATE

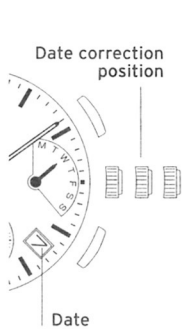


1. Pull the crown out to the date correction position.
2. Turn the crown clockwise to set the date.
 - * If the date is set while the time on the watch is between the hours of about 9:00 PM and 1:00 AM, the date may not change on the following date. If this happens, set the date after temporarily moving the hands to a time other than between the above times.
 - * The date is based on a 31-day calendar. The date must be changed from the last day of the month to the first day of the following month for those months not having 31 days (months having 30 days and February).
 - * The date will change in 10:00 PM - 12:00 AM.
3. Once the date has finished being set, return the crown to the normal position.

SETTING THE DAY



1. Pull the crown out to the date correction position.
2. Turn the crown anti-clockwise to set the date.
 - * If the day is set while the time on the watch is between the hours of about 11:00 PM and 2:00 AM, the day may not change on the following day.
 - * The day will change in 1:00 AM - 2:00 AM.
3. Once the day has finished being set, return the crown to the normal position.

USING THE CHRONOGRAPH

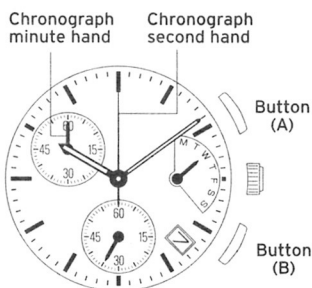


The chronograph function of this watch is able to measure and display elapsed time up to 59 minutes 59 seconds in 1 second units. After the chronograph displays elapsed time for 59 minutes 59 seconds, it resumes timing from 0 seconds. The chronograph minute hand continues to move until the chronograph is stopped by pressing button (A) even after 59 minutes 59 seconds have elapsed.


USING THE CHRONOGRAPH

[Chronograph Timing]

1. Start timing by pressing button (A).
 - * The chronograph is repeatedly started and stopped by pressing button (A).
2. Pressing button (B) resets the chronograph to 0 seconds.



ZERO POSITIONING OF CHRONOGRAPH HANDS (after replacing the battery)

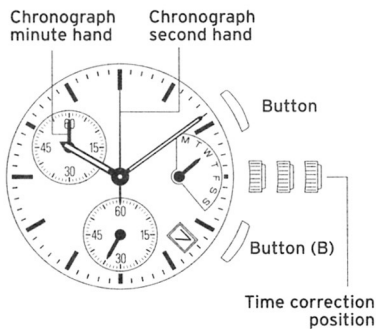

When resetting the chronograph after replacing the battery, if the chronograph second hand does not return to the 0 seconds position or if the chronograph second hand has shifted out of position due to a strong impact, perform zero positioning of the chronograph hands according to the procedure described below.

ZERO POSITIONING OF CHRONOGRAPH HANDS (after replacing the battery)

[Chronograph Hand Zero Positioning]

1. Pull the crown out to the time correction position.
2. Press button (A) to position the chronograph second at the 0 position.
 - * The chronograph second hand can be advanced rapidly by depressing button (A) continuously.
3. Once the chronograph second hand has been positioned at the 0 position, reset the time and return the crown to the normal position.
4. Press button (B) to check that each of the chronograph hands has been reset to the 0 position.

SPECIFICATIONS

1. **Caliber. No:** FS60, FS61
 2. **Type:** Analog quartz watch
 3. **Timekeeping accuracy:** Within ± 20 seconds per month on average (when worn at normal temperatures of $+5^{\circ}\text{C}$ to $+35^{\circ}\text{C}$ / 41°F to 95°F)
 4. **Crystal oscillator:** 32,768 Hz
 5. **Operating temperature range:** -10°C to $+60^{\circ}\text{C}$ / 14°F to 140°F
 6. **Display functions:**
 - * Time: hours, minutes, seconds
 - * Calendar: Day, Date
 - * Chronograph: Measurement and display up to 59 minutes 59 seconds in 1 second units
 7. **Battery:** Miniature silver battery, 1
 Battery part no.: SR626SW
 Battery life: Approx. 2 years (when using the chronograph for 1 hour/day)
- * Specifications are subject to change without notice.